




CP


Assembly Instructions

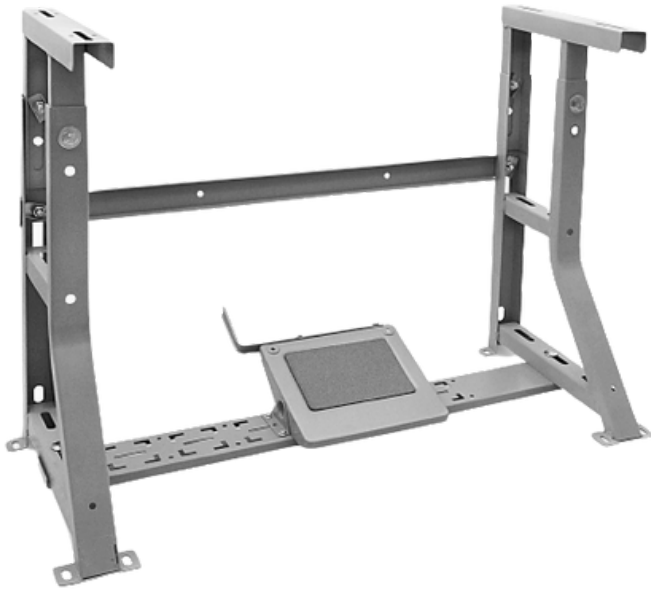

MANUFACTURERS
OF INDUSTRIAL
EQUIPMENT

Corporate Offices:
8900 Sovereign Row
Dallas, TX 75247-4502
241.637.4473/800.441.0925

Manufacturing Facilities:
125 Kirby Road
Portland, TN 37148-8816
615.323.7233/800.822.5376

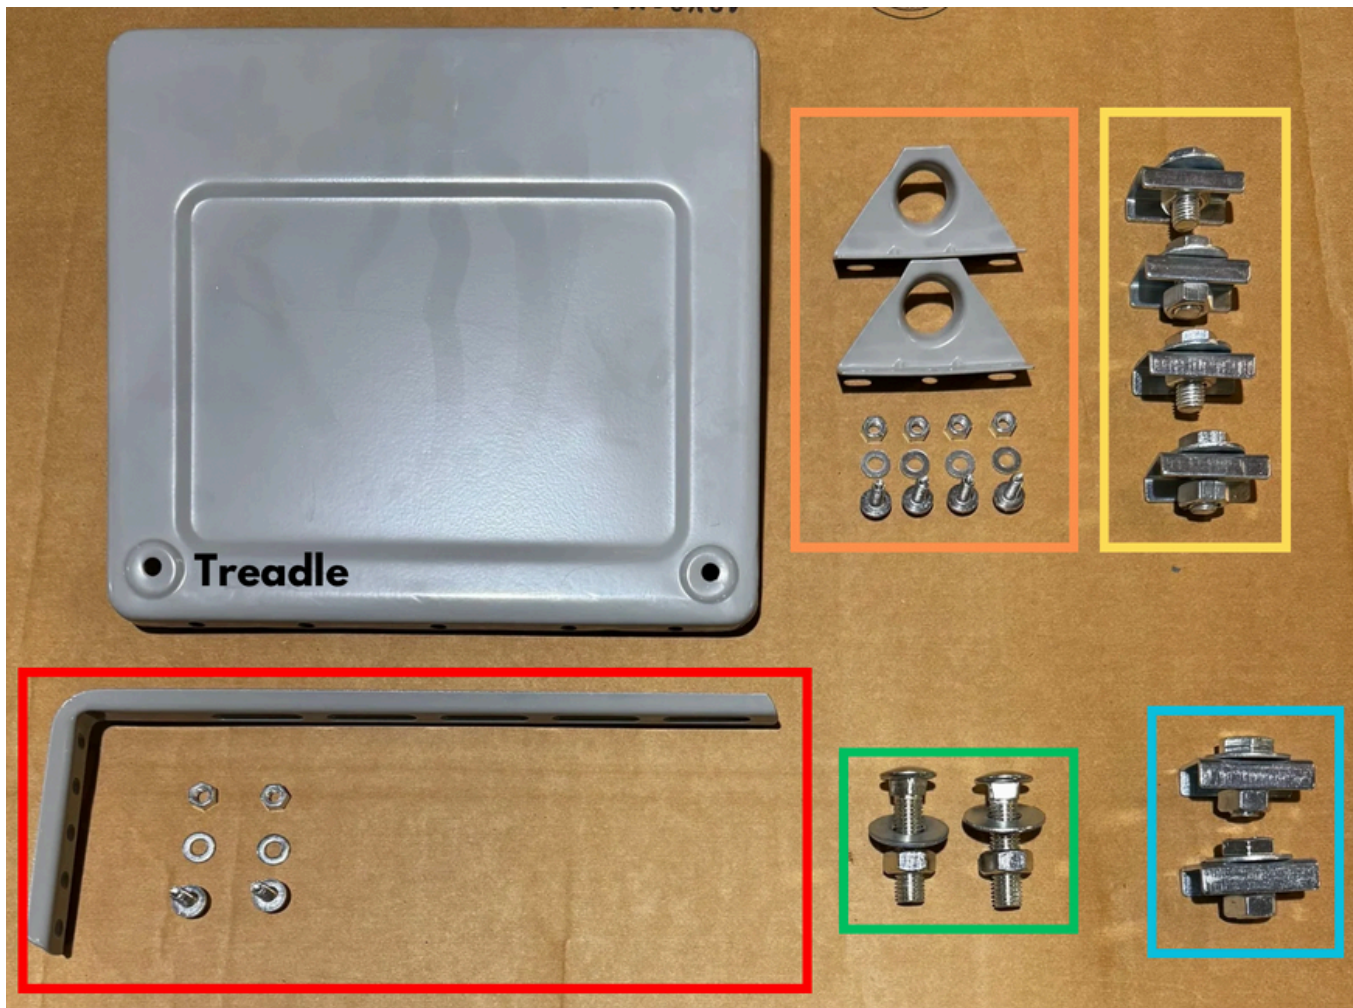

Extension

2 M6x12 Screws,
Washers, & Nuts

Lugs

4 M6x12 Screws,
Washers, & Nuts
(2 Per Lug)

Leg Height Adjustment

4 M12x25 Screws,
Washers, U Washers, & Nuts
(2 Per Leg)

Bottom Brace

2 M12x50 Screws,
Washers, & Nuts

Back Brace

2 M12x25 Screws,
Washers, U Washers, & Nuts


1

Attach back brace to legs using 2 M12x25 screws, washers, u washers, & nuts.



2

Adjust each leg to preferred height. Secure each front and rear of leg with 1 M12x25 screw, washer, u washer, & nut.

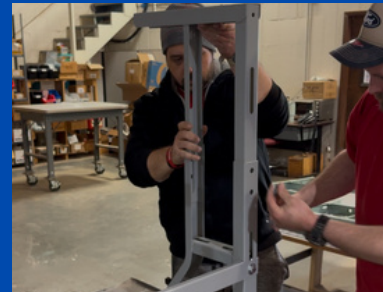

3

**Attach bottom brace
using 2 M12x50
screws, washers, & nuts.**



4

**Attach each lug to bottom
brace using 2 M6x12
screws, washers, & nuts.
Keep finger tight until
install of treadle.**



5

**Attach extension to
treadle using 2 M6x12
screws, washers, & nuts.**



6

**Slide treadle between
lugs. Push lugs flush
against treadle.
Tighten lug screws to
lock treadle in place.**

