



GK-2


Assembly Instructions



MANUFACTURERS OF INDUSTRIAL EQUIPMENT

Corporate Offices:
8900 Sovereign Row
Dallas, TX 75247-4502
241.637.4473/800.441.0925

Manufacturing Facilities:
125 Kirby Road
Portland, TN 37148-8816
615.323.7233/800.822.5376

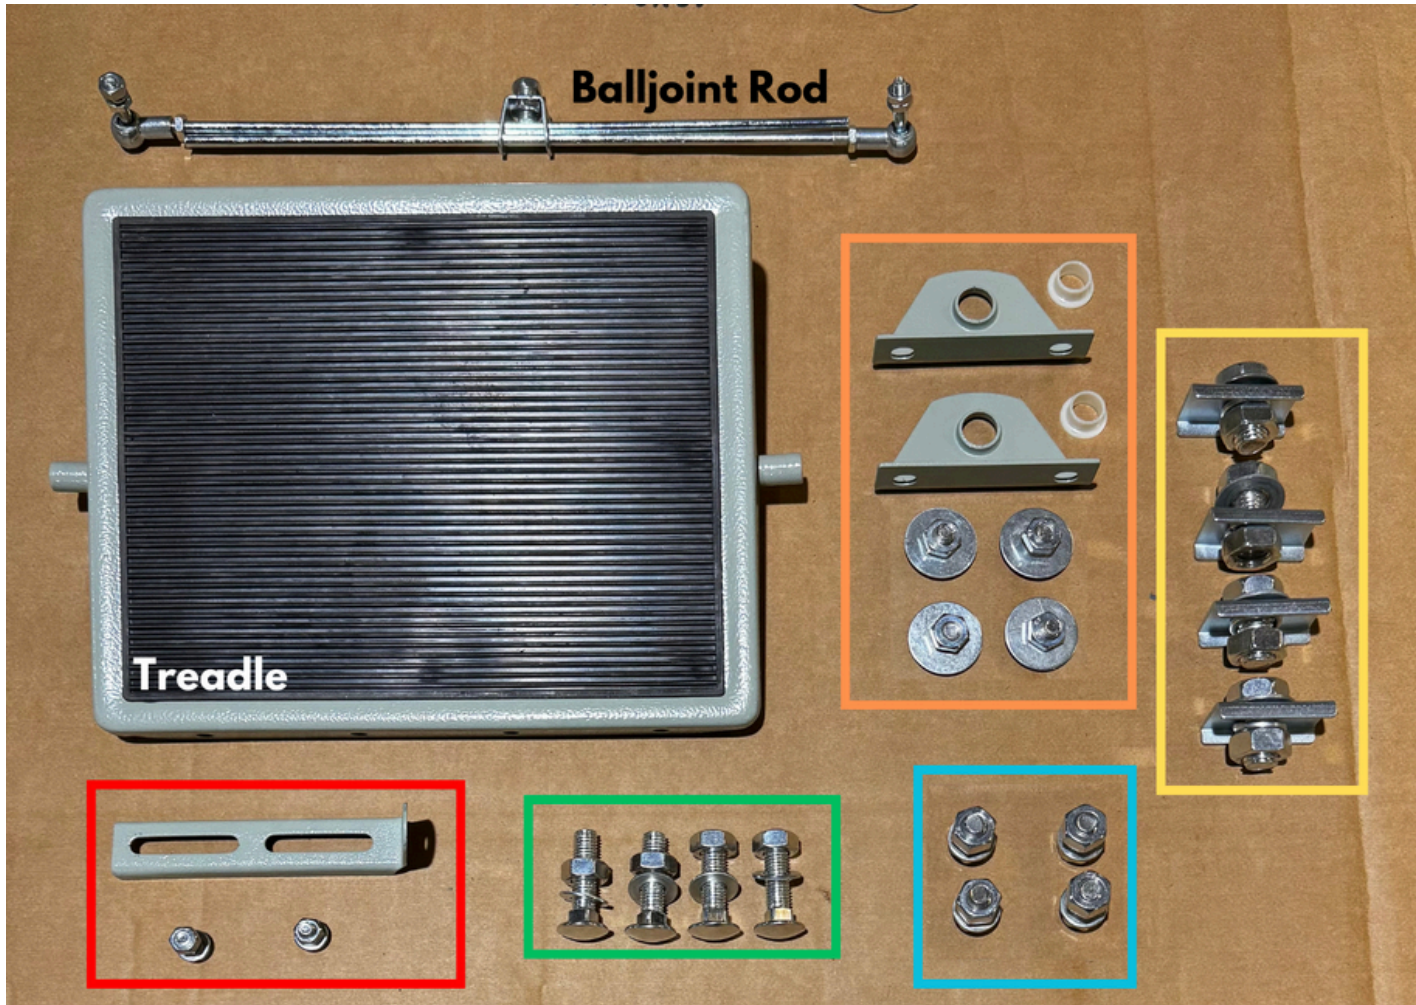

Balljoint Rod

Treadle

Extension
2 M6x12 Screws,
Washers, & Nuts

Lugs
4 M10x16 Screws,
Washers, & Nuts
(2 Per Lug)

Leg Height Adjustment
4 M14x25 Screws, Washers,
U Washers, & Nuts
(2 Per Leg)

Bottom Brace
4 M10x40 Screws,
Washers, & Nuts

Back Brace
4 M8x16 Screws,
Washers, & Nuts

1

**Attach back brace
to legs using 4 M8x16
screws, washers, & nuts.**



2

**Adjust each leg to
preferred height.
Secure each front and
rear of leg with 1 M14x25
screw, washer, u washer,
& nut.**



3

**Attach bottom brace
using 4 M10x40
screws, washers, & nuts.**



4

**Attach each lug to bottom
brace using 2 M10x16
screws, washers, & nuts.
Keep finger tight until
install of treadle.**



5

**Attach extension to
treadle using 2 M6x12
screws, washers, & nuts.**



6

**Slide treadle between
lugs. Push lugs flush
against treadle.
Tighten lug screws to
lock treadle in place.**



**Attach balljoint rod to
treadle extension.**